


How to use RS232 to update


Only for Freesat V7 Combo /Freesat V7 HD / V8 Super /V8 Golden

1) run the tool


double click the following Icon to run the tool:

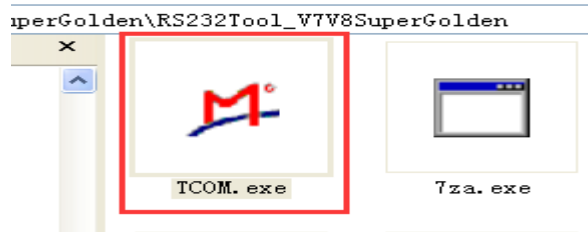


2) setting PC RS232 Port

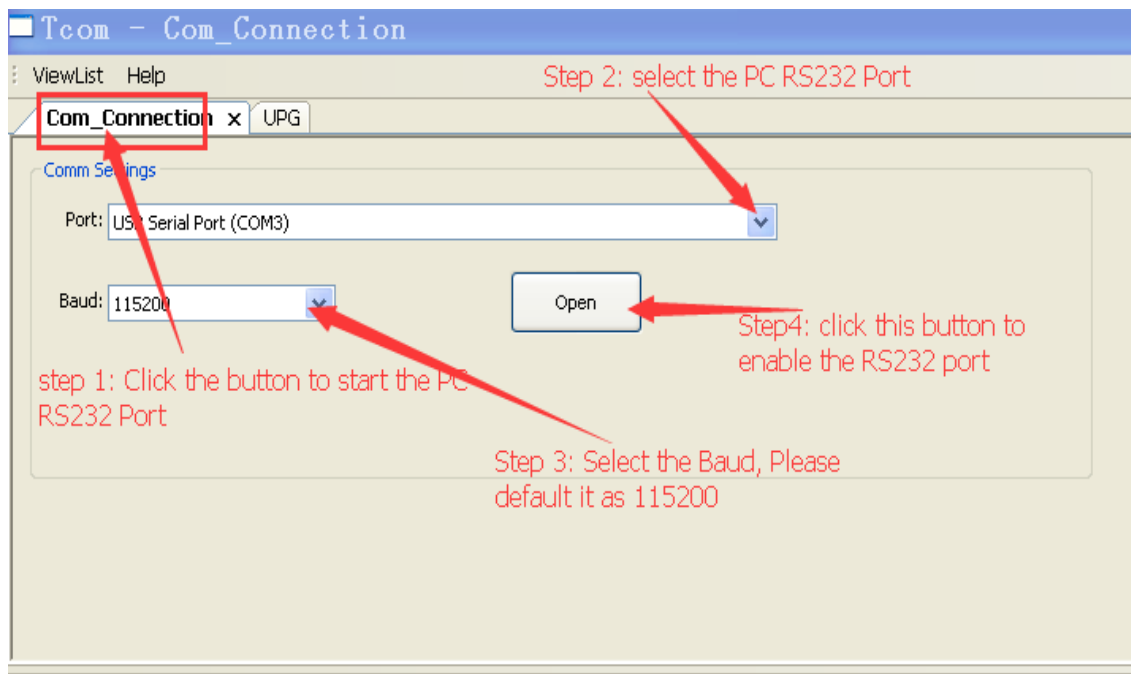



3: Select firmware to start

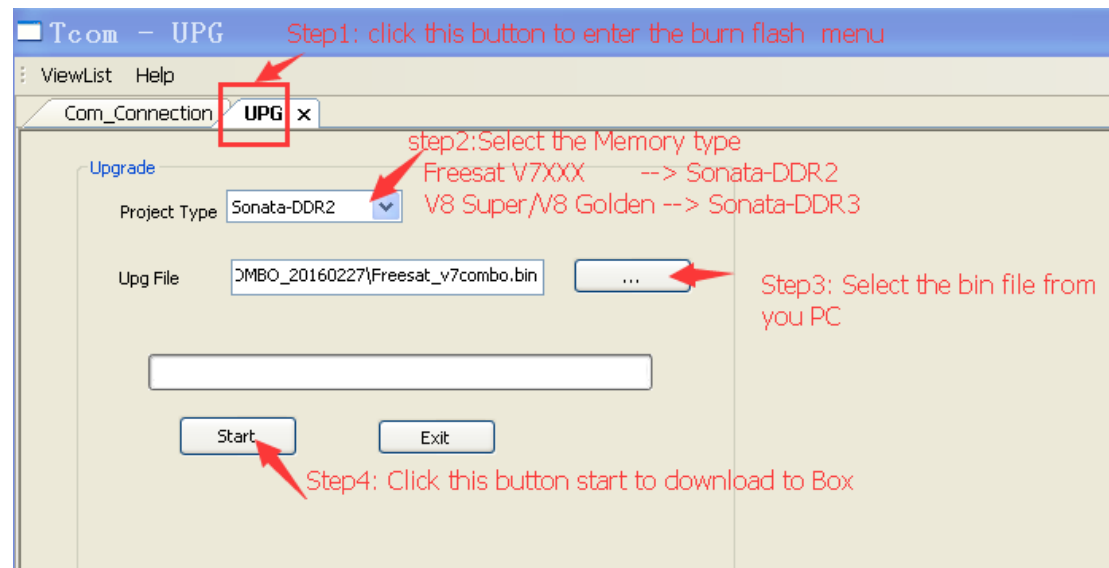

Please Power off your box when your look that information from the log region, same as the following .

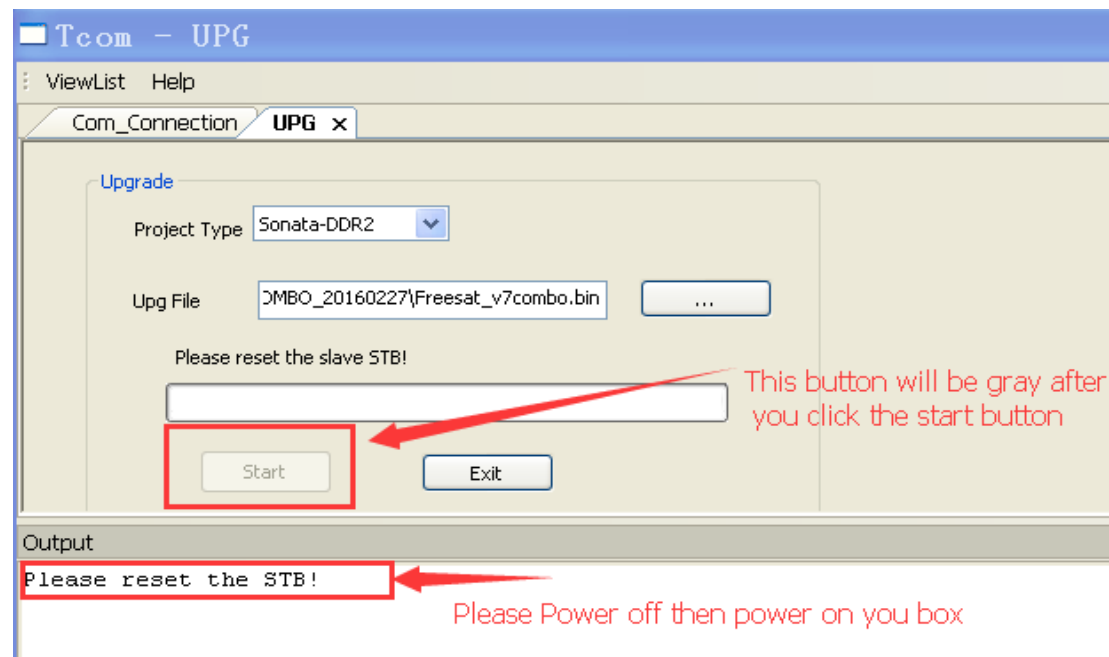

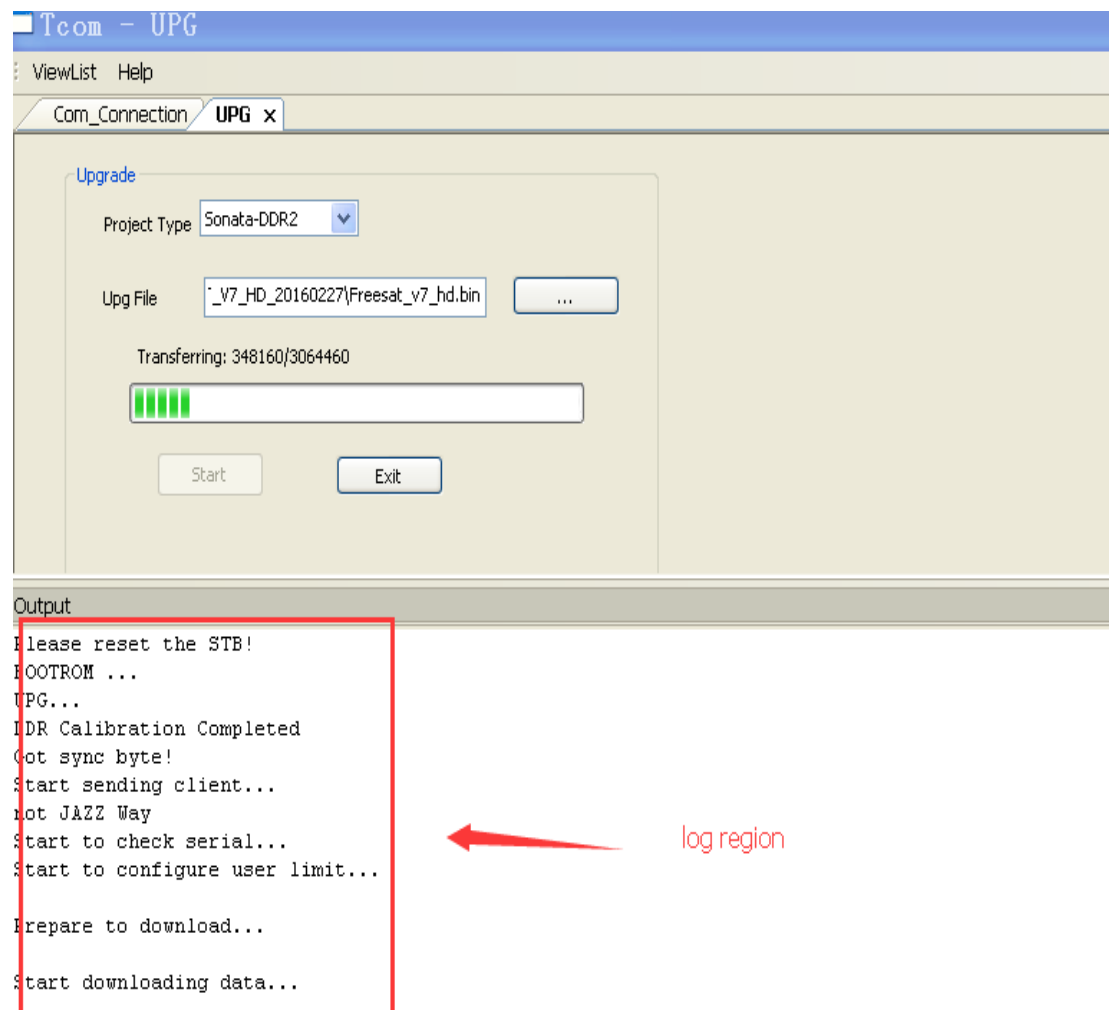

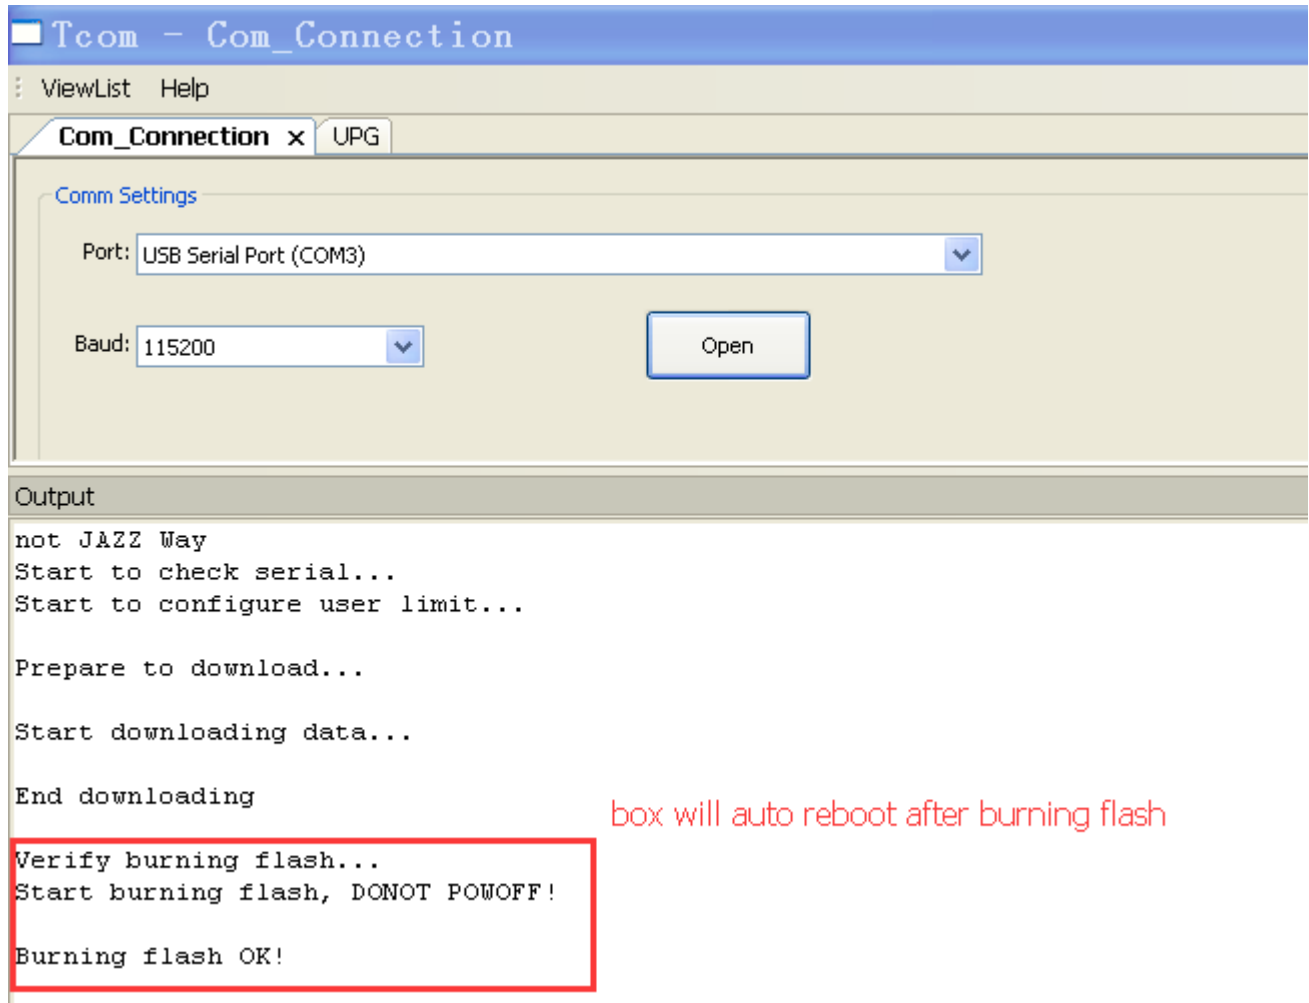

If you can look the upper log information. Congratulate you, It's Succeeded!

But some PC don't have URAT port now, some friend used USB switch to RS232 Cable, but some cable don't work stable. So I advice you can find one old pc to do it.